320W LED BSW fxiture USER MANUAL



User Manual

Please read the instruction carefully before use

Summary

- 3-Introduction
- 5- Dimension
- 6- Installation instructions
- 7- DMX chart
- 15- Error mesages
- 16- Technical parameter
- 17- Illumination
- 18-gobos

INTRODUCTION

Thank you for selecting the 320W LED hybrid fixture.

WARNING

This product is not suitable for household use.

Ybu now own a professional lighting unit that offers endless possibilities. Before installing, make sure that no damage was done to your luminaire during transport.

For your own safety and that of others, please read this instruction manual carefully before installing the unit

Anyone involved in installing, operating or servicing the 600W LED profile must: , Be a qualified, authorized professional

· Strictly follow the instructions in this user manual.

Please take the time to read this manual carefully and thoroughly before installing and operating the luminaire. Ybu should have a good knowledge of its operating conditions and all pertinent product information.

After you have become familiar with this manual, we recommend that you keep a copy for future use.

SAFETY INSTRUCTIONS

Please read the safety instructions and warnings in this manual carefully before installing and operating the 320W Led BSW moving head .

WARNING!

Risk of electric shock.

Use caution when handling. This luminaire requires high voltage, which can result in electric shock.

The 320W LED fixture left our factory in perfect working condition. However, if you notice a defect, immediately contact our factory before use.

Failure to observe the safety, installation or assembly instructions contained herein, or any modification made to the 320W LED fixture will render the warranty null and void.

Check that the supply voltage does not exceed the maximum authorized limit. Check that your electrical installation complies with current standards.

In all cases, make sure that the power cables attached to your 320W LED fixture have not been damaged due to cuts and splices or crushed in any way. Handle these cables with extreme caution while they are connected to a power source.

Ybur 320W LED fixture conforms to Class 1 safety standards. The unit must be grounded electrically. Make sure that the power source connected to your 600W LED

profile is switched off before attempting any work on it.

Installation and connection to an electrical source must be performed by an authorized installer

Our factory declines all responsibility should this luminaire be installed by an unqualified person.

Never disconnect your 320W LED profile by pulling on the power cable! First unlock the connector lock ring on the power cable until it is fully disengaged, and then gently pull on the connector to disconnect the cable.

Do not connect or disconnect the power cable of your 320W LED fixture with wet hands.

At first use, your 320W LED fixture may give off an odor. This is a normal occurrence that should dissipate after a few minutes of operation.

WARNING!

Do not connect or disconnect the power cable at your 320W LED fixture if the cable is energized! This could cause arcing and damage your 320W LED fixture, requiring repair.

Be careful to power off your 320W LED fixture by removing the power plug from the source, before connecting or disconnecting the luminaire.

WARNING!

Never look directly into the lamps if lit or stand directly in line with the luminaire if close by.

Installation, removal or replacement of the unit must be performed with power off to prevent any risk of glare and eye injury.

WARNING

The fixture quickly becomes very hot during operation.

To avoid risk of burn, never handle or adjust the luminaire while it is energized and after it has been lit for more than 10 consecutive minutes. Some parts of the luminaire can reach a high temperature, particularly the body/radiator. Turn o ffthe luminaire and wait for it to cool before handling.

CONDITIONS OF USE

Your 320W LED fixture is a moving-head luminaire equipped with LED source intended for professional use (e.g., architectural, stage, television, theater, or museum lighting).

The 320W LED fixture has an IP20 protection rating. It is intended strictly for indoor use. It must never be partially or fully submerged, even temporarily.

Condensation may form on your 320W LED fixture in the following cases:

- Immediately after turning on the heating
- In places with fog or a high level of humidity
- When the luminaire is suddenly moved from a cold to a warm environment, or vice versa.

In such cases, you must wait until the luminaire readjusts to the ambient temperature of the room where it will be installed for operation.

Do not shake the 320W LED fixture while installing or handling. Do not pull the 320W LED fixture by one of its cables to move it. Lift the luminaire by its handles.

Choosing the appropriate place to install the 320W LED fixture is essential. The following points should be observed:

- Do not expose it to a heat source.
- Do not install it near flammable materials.
- -Be sure that dust or miscellaneous debris cannot clump around the body of the luminaire as this may interfere with its optimal cooling and proper operation.
- The 320W LED fixture must be installed out of reach of the public and all persons not authorized to operate the luminaire.

We recommend a minimum distance of 5 m between the outside surface of the light and the illuminated object.

necessary safety factors.

Do not use your 320W LFD fixture before being familiar with these recommendations and do

lb transport your 320W LED fixture, we strongly recommend that you use the complete original packaging, including the dense protective foam inserts

If your 320W LED fixture is not being used for a long period, you should disconnect the luminaire from the power source.

Never dispose of the 320W LED fixture in a rubbish bin.

PRESENTATION AND FEATURES

The 320W LED fixture is a non-waterproof moving head wash light (IP20 protection rating) using the latest generation of high-performance of LED-type lamps

This luminaire can be controlled remotely by an external DMX512 signal.

The 320W LED fixture incorporates high power white LED source.

The luminaire requires from 36 to 58 DMX channels to be controlled via an external command system that sends a DMX512 signal (see below for details).

lb adjust the settings on the 320W LED fixture (i.e., DMX address, DMX operating mode and other options), a Remote Device Management (RDM)-type DMX controller may be required. The DMX RDM protocol is a universal, widely used standard.

A light console or any standard DMX-type controller is sufficient. The 320W LED fixture consists of a metal frame and plastic covers. The power connectors and DMX512 signal connectors are on the back of the fixture's base.

Due to the nature of its cooling principle, you should never prevent air from circulating around the body of the luminaire. You must provide a minimum clearance around your 320W LED fixture to allow for cooling.

The 320W LED fixture can be installed in a ground pit or any other confined enclosure only under certain conditions. With this kind of installation, a system of forced ventilation should be used up to allow air to circulate freely around the luminaire(s). The air must be constantly renewed because the luminaire cannot be operated in closed system. Failure to comply with these requirements may destroy or prematurely wear the 400W LED fixture, and our company cannot be held responsible.

No load should be placed on the 320W LED fixture. The fixture must not be installed in such a way as to allow a person, vehicle or any object to run over or park on it.


Never lay or drop any hard, heavy, or blunt, objects on the 320W LED fixture. This includes items made of glass or porcelain (e.g., bottles, dishware, or glass beads). The luminaire is made of materials such as plastic and extruded aluminum, making it resistant but not unbreakable. Objects made of hard materials such as steel or glass that fall on the unit may cause breakage of the plastic parts or the body. Our company cannot be held responsible for the luminaire's broken plastic parts or body, which are not covered under warranty.


The temperature of the room where the 320W LED fixture is installed must never exceed 45°C (la = 45°C).

The 320W LED fixture requires a 110-240V AC supply voltage. Check that your luminaires have been installed for an application that is compatible with this information.

Check that the brackets on which you hang or attach your 600W LED profile can sustain the weight of the luminaire (30kg), taking into consideration all

USER MANUAL 4

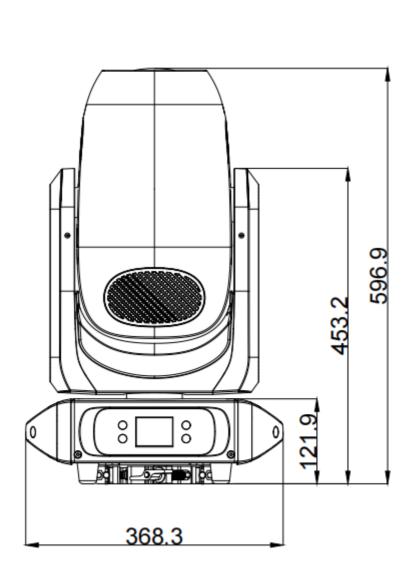

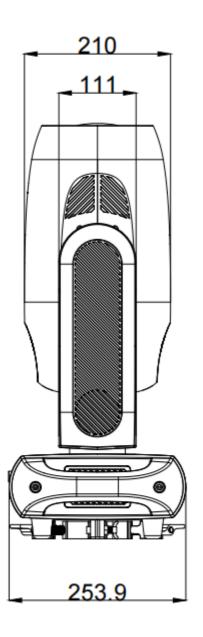

Dimension

INSTALLATION INSTRUCTIONS.

This luminaire should be installed by a qualified technician.

The fixture should be used in an environment with a temperature between -5°C and +45°C. Do not operate the luminaire outside this temperature range.

The luminaire must be hung so that the weight of this unit multiplied by 10 can be sustained for 1 hour without causing the suspension system or the supporting structure to be deformed.

The installation must always be secured at a second attach point, e.g., by a safety cable of the appropriate size.

Do not stand under the luminaire while it is being installed, dismantled or serviced.

The operator must ensure that a qualified technician has approved the installation of the luminaire for safety before it is first operated.

Installation should be inspected once a year by a qualified technician. WARNING! The installation of this luminaire must be validated by a qualified technician before it is used for the first time.

The luminaire should be installed in a location where the public cannot, touch, walk or sit on the luminaire.

Suspending the luminaire and/or installing it high up requires considerable experience, e.g., calculating load, selecting and adapting quality fastening materials, and periodically inspecting the entire installation. Without this skill and knowledge, do not attempt to install this unit by yourself. Improper installation may cause an accident resulting in personal injury or death.

WARNING!

The luminaire should be connected to an electrical source by a qualified electrician.

Before installing the luminaire make sure that the selected installation spot can support at least 10 times the weight of the unit. Connect the luminaire to the power source by the power cord.

320W LED beam spot wash hybrid moving head

Mode		Value	Function	
19CH	25CH			
1	1		Pan Movement 8bit:	
	Į	0-255	Pan Movement	
2	2		Pan Fine 16bit	
2 2	2	0-255	Fine control of Pan movement	
2	2		Tilt Movement 8bit:	
3	3 3	0-255	Tilt Movement	
4	4		Tilt Fine 16bit	
4	4	0-255	Fine control of Tilt movement	
5	5		Speed Pan/Tilt movement:	
5	5	0-255	max to min speed	
			Shutter,strobe	
		0-10	Shutter closed	
		11-21	Shutter open	
		22-126	Strobe effect slow to fast	
6	6	127-137	Shutter open	
		138-201	Pulse-effect in sequences	
		202-212	Shutter open	
		213-244	Random strobe effect slow to fast	
		245-255	Shutter open	
7	7		Dimmer intensity:	
,	,	0-255	Intensity 0 to 100%	
	8		Dimmer intensity Fine:	
	ŏ	0-255	Dimmer intensity fine	
8	9		Zoom:	
Ø	9	0-255	Zoom adjustment from small to big	
	10		Zoom Fine:	
1		0-255	Zoom adjustment Fine	
0	11		Focus:	
9		0-255	Continuous adjustment from near to far	
	12		Focus Fine:	
		0-255	Continuous adjustment Fine	
10	10		Auto Focus:	
10	13	0-51	Auto Focus Off	

		52-102	5m
		103-153	7.5m
		154-204	10m
		205-255	15m
44	4.4		Auto Focus Fine:
11	14	0-255	Continuous adjustment Fine
			Color Wheel:
		0-19	Open
		20-25	Open/Color1
		26-31	Color1
		32-37	Color1/Color2
		38-43	Color2
		44-49	Color2/Color3
		50-55	Color3
		56-61	Color3/Color4
		62-67	Color4
		68-73	Color4/Color5
12	15	74-79	Color5
		80-85	Color5/Color6
		86-91	Color6
		92-97	Color6/Color7
		98-103	Color7
		104-109	Color7/Color8
		110-115	Color8
		116-121	Color8/Open
		122-127	Open
		128-189	Forwards rainbow effect from fast to slow
		190-193	No rotation
		194-255	Backwards rainbow effect from slow to fast
	16		Color Wheel Fine:
	10	0-255	Color Wheel colour change to any position Fine
	17		Rotating gobos,cont.rotation 1:
		0-7	Open
		8-20	Rot.gobo1
13		21-33	Rot.gobo2
		34-46	Rot.gobo3
		47-59	Rot.gobo4
		60-72	Rot.gobo5

		73-85	Rot.gobo6
		86-98	Rot.gobo7
		99-111	Gobo 1 shake slow to fast
		112-124	Gobo 2 shake slow to fast
		125-137	Gobo 3 shake slow to fast
		138-150	Gobo 4 shake slow to fast
		151-163	Gobo 5 shake slow to fast
		164-176	Gobo 6 shake slow to fast
		177-189	Gobo 7 shake slow to fast
		190-221	Gobo wheel rotation forwards from fast to slow
		222-223	No rotation
		224-225	Gobo wheel rotation backwards from slow to fast
			Rotating gobo index,rotating gobo rotation 1:
		0-127	Gobo indexing
14	18	128-189	Forwards gobo rotation from fast to slow
		190-193	No rotation
		194-255	Backwards gobo rotation from slow to fast
	19		Rotating gobo indexing Fine 1:
	19	0-255	Fine indexing
			Fixed Gobo2:
		0-13	Open
		0-13 14-19	Open Gobo 1
		14-19	Gobo 1
		14-19 20-25	Gobo 1 Gobo 2
		14-19 20-25 26-31	Gobo 1 Gobo 2 Gobo 3
		14-19 20-25 26-31 32-37	Gobo 1 Gobo 2 Gobo 3 Gobo 4
		14-19 20-25 26-31 32-37 38-43	Gobo 1 Gobo 2 Gobo 3 Gobo 4 Gobo 5
15	20	14-19 20-25 26-31 32-37 38-43 44-49	Gobo 1 Gobo 2 Gobo 3 Gobo 4 Gobo 5 Gobo 6
15	20	14-19 20-25 26-31 32-37 38-43 44-49 50-55	Gobo 1 Gobo 2 Gobo 3 Gobo 4 Gobo 5 Gobo 6 Gobo 7
15	20	14-19 20-25 26-31 32-37 38-43 44-49 50-55 56-61	Gobo 1 Gobo 2 Gobo 3 Gobo 4 Gobo 5 Gobo 6 Gobo 7 Gobo 8
15	20	14-19 20-25 26-31 32-37 38-43 44-49 50-55 56-61 62-67	Gobo 1 Gobo 2 Gobo 3 Gobo 4 Gobo 5 Gobo 6 Gobo 7 Gobo 8 Gobo 9
15	20	14-19 20-25 26-31 32-37 38-43 44-49 50-55 56-61 62-67 68-73	Gobo 1 Gobo 2 Gobo 3 Gobo 4 Gobo 5 Gobo 6 Gobo 7 Gobo 8 Gobo 9 Gobo 10
15	20	14-19 20-25 26-31 32-37 38-43 44-49 50-55 56-61 62-67 68-73 74-79	Gobo 1 Gobo 2 Gobo 3 Gobo 4 Gobo 5 Gobo 6 Gobo 7 Gobo 8 Gobo 9 Gobo 10 Gobo 11
15	20	14-19 20-25 26-31 32-37 38-43 44-49 50-55 56-61 62-67 68-73 74-79 80-89	Gobo 1 Gobo 2 Gobo 3 Gobo 4 Gobo 5 Gobo 6 Gobo 7 Gobo 8 Gobo 9 Gobo 10 Gobo 11 Gobo 1 shake slow to fast
15	20	14-19 20-25 26-31 32-37 38-43 44-49 50-55 56-61 62-67 68-73 74-79 80-89 90-99	Gobo 1 Gobo 2 Gobo 3 Gobo 4 Gobo 5 Gobo 6 Gobo 7 Gobo 8 Gobo 9 Gobo 10 Gobo 11 Gobo 1 shake slow to fast Gobo 2 shake slow to fast
15	20	14-19 20-25 26-31 32-37 38-43 44-49 50-55 56-61 62-67 68-73 74-79 80-89 90-99 100-109	Gobo 1 Gobo 2 Gobo 3 Gobo 4 Gobo 5 Gobo 6 Gobo 7 Gobo 8 Gobo 9 Gobo 10 Gobo 11 Gobo 1 shake slow to fast Gobo 2 shake slow to fast Gobo 3 shake slow to fast

		140-149	Gobo 7 shake slow to fast
		150-159	Gobo 8 shake slow to fast
		160-169	Gobo 9 shake slow to fast
		170-179	Gobo 10 shake slow to fast
		180-189	Gobo 11 shake slow to fast
		190-221	Gobo wheel rotation forwards from fast to slow
		222-223	No rotation
		224-255	Gobo wheel rotation backwards from slow to fast
			Prism:
16	21	0-127	Open
		128-255	Prism
			Rotating prism index,rotating prism rotation
		0-127	Prism indexing
17	22	128-189	Forwards prism rotation from fast to slow
		190-193	No rotation
		194-255	Backwards prism rotation from slow to fast
	00		Rotating prism indexing Fine:
	23	0-255	Fine indexing
			Frost:
18	24	0-127	Open
		128-255	Frost
			Reset、LCD、Fans
		0-9	unused
		10-19	Display Off
		20-29	Display On
		30-39	Display Invert Off
		40-49	Display Invert On
		50-59	Auto fan control mode
	•	60-69	High fan control mode
19	25	70-79	Silent fan control mode
		80-82	Square Law
		83-85	Inv SQ Law
		86-88	Linear
		89-91	S Curve
		92-94	800Hz Refresh rate
		95-97	1200Hz Refresh rate
		98-100	3600Hz Refresh rate
		101-103	5000Hz Refresh rate

104-106	10KHz Refresh rate
107-109	15KHz Refresh rate
110-112	20KHz Refresh rate
113-115	25KHz Refresh rate
116-118	Standard
119-121	Stage
122-124	TV
125-127	Architecture
128-130	Studio
131-149	unused
150-159	All motor reset
160-169	Scan motor reset
170-179	Colors motor reset
180-189	Gobo motor reset
190-199	Other motor reset
200-255	unused

ERROR MESSAGES

When you turn on the 320W LED fixture, it will first perform an automatic reset.

The display may show "Err channel is XX" indicating there is a problem with one or more of the channels. "XX" represents channel 1, 2, 3, 4, 5 or 6, which contain the testing sensor for positioning. For example, the message, "Err channel is Pan movement, indicates an error in channel 1. If there is an error on channel 1 and channel 3 at the same time, the following error message may appear: "Err channel is Pan movement", "Err channel is Tilt movement". The system will flash twice, and the fixture will generate a second reset. If the error message persists after more than two resets, the channels showing errors will not work properly but the other channels will function normally.

Please contact our company for service and do not attempt to repair the luminaire yourself.

PAN- movement Er

(PAN-yoke movement error): This message will appear after the reset if the yoke's magnetic-indexing circuit malfunctions (failed sensor or magnet missing) or the stepping-motor is defective (also caused by its driving IC on the main PCB) The PAN- movement does not return to the default position after the reset.

TILT- movement Er

(TILT-head movement error): This message will appear after the reset if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepping-motor is defective (also caused by its driving IC on the main PCB) The TILT- movement does not return to the default position after the reset.

Technical parameter

POWER

Voltage:AC100~240v,50/60Hz

Source: 300W white LED Power consumption:350W

CT:7500K

Life: >20,000H

OPTICS

Zoom: 3° - 45° linear zoom

MOVEMENT

Pan movement: 540° optional (16 bit)

Tilt movement: 270° (16 bit)

Advanced motion system: auto repositioning, fast, quiet and smooth

COLORS

1 color wheels with 8 color + white Interchangable ,indexable ,bidirectional rainbow effect

GOBOS

1 Rotating gobo wheels:

7 interchangeable gobo+ open ,indexable and gobo shaking

1 fixed gobo wheel:

9 fixed gobo+open, with gobo shaking effect

FEATURES

DMX channels: 19/25CH

Prism: 5 facet prism, prism can be positioned

Motorized Focus various strobe

Frost

Dimming: 0-100% linear dimming

DISPLAY

2.8 inch LCD display with English/Chinese menu Auto lock and display flip Pan/ Tilt reverse

SOFTWARE

Upgraded: fast and convenient using Remote reset DMX address, fixture reset Sound control by DMX

OTHER SPEC

Input signal isolation

Optional ArtNET control(if need Artnet need extra charge)

RDM compatible

Fan speed auto change according to temperature

DIMENSIONS AND WEIGHT

Net Weight: 17KG Gross weight:20KG

Packing Dimension: 47x35x70cm


















Rotating Gobo wheel

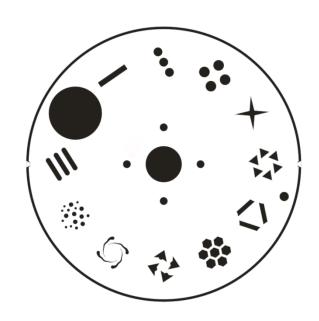

Fixed gobo wheel